



Air Cleaning Filters - Installation Manual

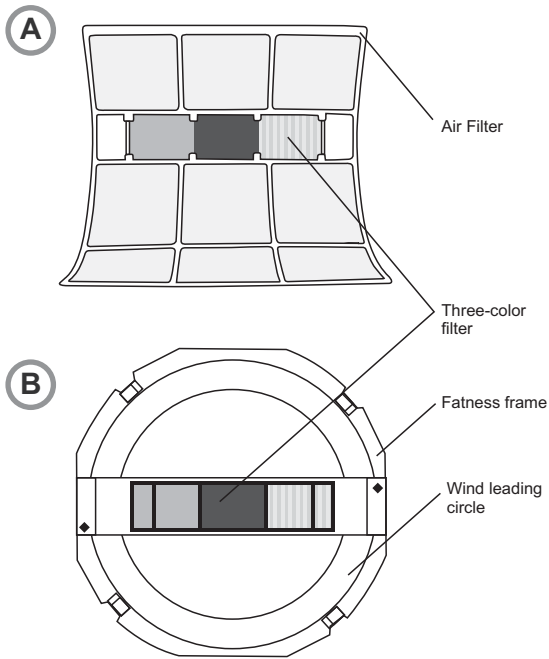



A Fix in split aircon: Hold up the indoor panel, put up the middle prominent part of air filter and pull it down, take out the super ACF-sterilization & anti-fungus filter with frame from the plastic bag and fix it to the installing clip completely, set the air filter back to the original place, hinge up the indoor panel and fasten tightly.

B Fix in stand aircon: Open the panel under the stand aircon, take out the super ACF-sterilization & anti-fungus filter with frame from the plastic bag and fix it to the frame on the wind leading circle of vent in the fastness frame completely, hinge up the indoor panel and fasten tightly.

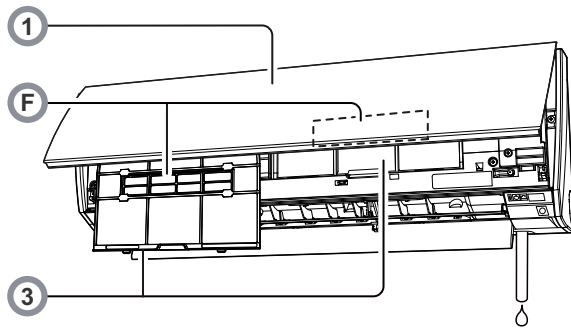


1 Open the intake grille.

2 While holding the intake grille with your hand, pull up the handle **a** of the filter in direction of the arrow and release the 2 claws **b**. Then pull the filter out with gently sliding it downward **c**.

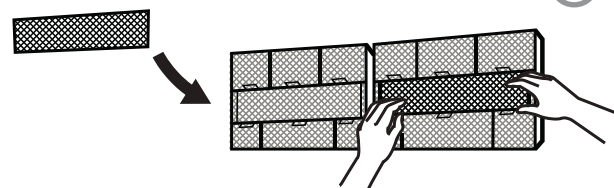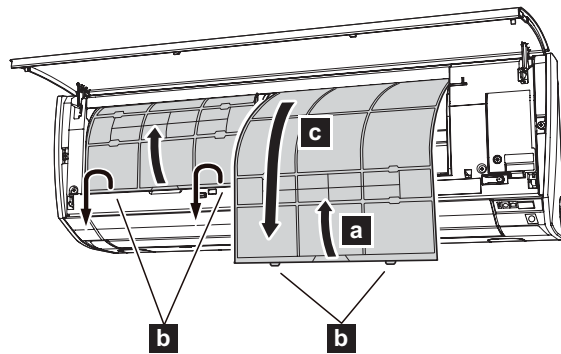

3 Filter holder and air cleaning filter are attached on the rear side of the air filter. Remove them from the air filter by unlatching each corner of the filter holder **d**.

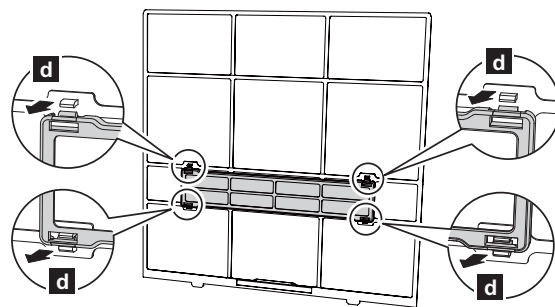


4 Attach the air cleaning filter and the filter holder to each air filter.


5 Attach the air filter with aligning both side of the filter with the front panel, and push in the filter fully.

Note: Make sure that 2 claws are firmly snapped to the guide holes on the panel.

6 Close the intake grille firmly.
(Refer to step 4 in "Cleaning the intake grille".)

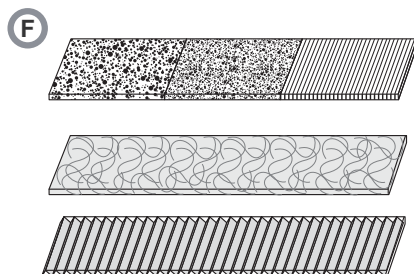

Air cleaning filters

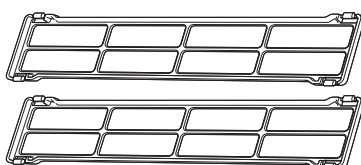

Filter holders