

Klimaïre i FEEL Remote Control

1 ON/OFF Button
To start / stop the operation of the unit when this button is pressed

2 DOWN (▼) Press this button to decrease the temperature of the room press the down arrow.

3 UP (▲) Press this button to increase the temperature of the room press the up arrow.

4 MODE The operation mode is changed in sequence (AUTO - COOL DRY - FAN - HEAT) every time this button is pressed.

5 ECO Function in this mode the unit automatically sets the operation to save energy. Press again to cancel.

6 TIMER The air conditioner can be turn automatically ON / OFF at any desired time.

7 FAN To set the Fan press MODE until (🌀) appears on the display. Use it for air ventilation only.

8 SLEEP Pre-set automatic operation. To activate press the SLEEP button and (☾) appears on the display. It can keep the most comfortable temperature and save energy. Press again to cancel this function.

9 DISPLAY To switch ON/OFF the unit panel led display to direct the air flow.

10 SWING (↔) Press this button to activate the vertical deflectors to swing from left to right to direct the air flow.

10 SELF-CLEAN Press SWING (↔) and SWING (↕) buttons at the same time to activate the Self-clean function. This is a pre-set program to clean the indoor coil.

11 SWING (↕) Press this button to activate the horizontal flaps to swing from up to down.

12 MUTE Press the MUTE button to activate/deactivate this function. When it is pressed the auto fan speed will display in the remote control. To cancel press FAN/TURBO/SLEEP. Inactive in dry mode.

13 TURBO Press TURBO to activate/deactivate the SUPER function which enables the unit to reach the preset temperature in the shortest time. To switch °F to °C press and hold for 5 seconds.

14 I FEEL To switch ON / OFF to initiate the Follow me function, the remote senses actual temperature at its location and sends signal for better comfort as if the remote were following you.

15 AH (Away Home) Activates/Disables to avoid freezing of the home when you are away during colder months keeping it at 46° F in heating mode.



I FEEL Remote Control & Wall Holder

	Battery indicator		Fan speed indicator: Auto/Low/Mid/High
	Auto Mode function indicator		Mute function indicator
	Cooling Mode indicator		SUPER function indicator
	Dry Mode indicator		Up-down auto swing indicator
	Fan only Mode indicator		Left-right auto swing indicator
	Heating Mode indicator		SLEEP function indicator
	ECO Mode indicator		Health function indicator
	Timer indicator		I FEEL functions indicator
	Temperature indicator		46°F Stand-by Heating

⚠ The display and some functions of the remote control may vary according to the model.

⚠ The unit confirms the correct reception of each button with a beep.

⚠ The shape and position of buttons and indicators may vary according to the model, but their function is the same.

⚠ The display and some functions of the remote control may vary according to the model.